



Quick Installation Guide


INTRODUCTION

Model	Power Source	Description
M2000-I	24VAC	Optional VAIR illuminator, -20°C ~ 65°C
M2000-AI	24VAC	Optional VAIR illuminator, -50°C ~ 65°C
M2000-IW	24VAC	Optional VAIR illuminator, Wiper, -20°C ~ 65°C
M2000-AIW	24VAC	Optional VAIR illuminator, Wiper, -50°C ~ 65°C

PACKAGE CONTENTS

* 1x Smart Enclosure	* 1x Quick Installation Guide
* 1x Plastic Gasket	* 1x Screw Accessories

CONNECTION

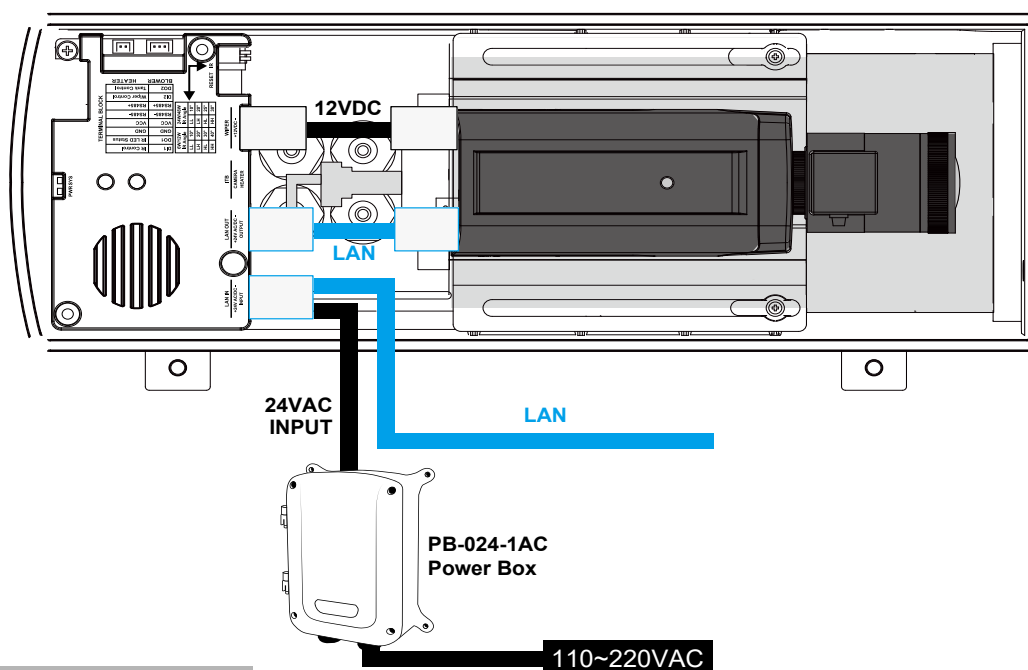

DEFAULTS

IP Address	DHCP client
------------	-------------

Account / Password

The device contains a security feature that requires a user to generate a new means of authentication before access is granted to the device for the first time.

Username

Enter your new username...

New password

Enter your new password...

New password confirm

Confirm your new password...

Apply

The first time login need key in new username and password, please enter the new username and password, and then click the <Apply> button.

LEDs

SYS	Red ON	System status.
PWR	Green ON	Power status.

Mode/Reset Button

Restart	~ 7 seconds	SYS LED blinking.
Reset to default	7 ~ 12 seconds	Green blinking