

## Quick Installation Guide

### INTRODUCTION

Model	Description
TE11-110-RX-V2	EPoT Rx Adapter, 1x EPoT RJ45, 1x PoE PD FE RJ45, 1 DC Jack, -20°C~60°C
TE10-110-TX-V2	EPoT Tx Adapter, 1x EPoT RJ45, 1x FE RJ45, 1 DC Jack, -20°C~60°C

### PACKAGE CONTENTS


* 1x EPoT dapter	* 1x Quick Installation Guide
------------------	-------------------------------

### ⚠ IMPORTANT:

1. Use CAT5e or CAT6 UTP/STP cables.
2. Please avoid using low quality cables, which will seriously limit the cabling distance and power delivery.
3. Make sure the power source is sufficient for your configuration.


### CONNECTION

#### Application :

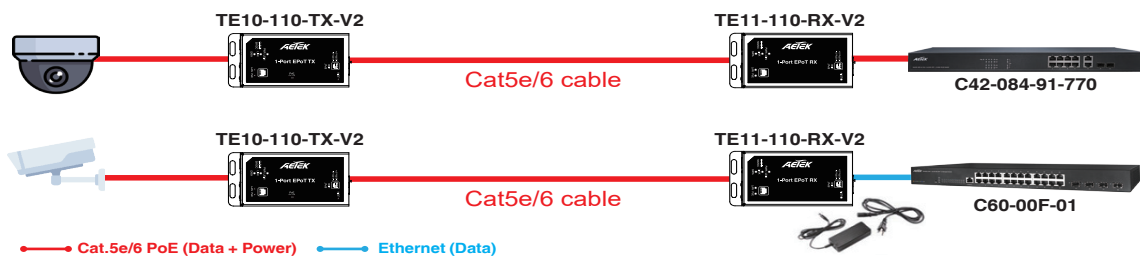

### INSTALLATION

#### Connect 56V/1.76A(Max.) TE10-110-TX-V2

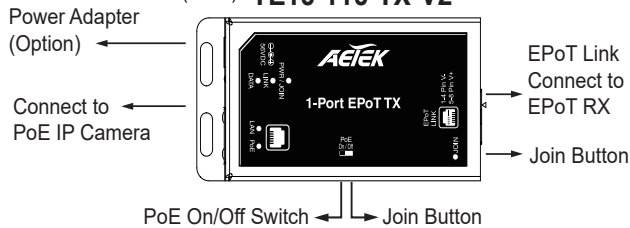

#### Connect 56V/1.76A(Max.) TE11-110-RX-V2



### LEDs

PoE	Yellow ON	PoE: Power port is connected to PD
LAN	Green flash	LAN: Data is being transmitted or received.
	OFF	No connection
PWR	Green ON	Power is supplied
LINK	Green ON	Rx and Tx EPoT adapter is connected.
DATA	Green ON	Data is being transmitted or received.

### DIP Switch

NOTE: The PoE On/Off switch is only available on TE10-110-TX-V2

DIP#	On	Off
	Delivery PoE output to PD device	No PoE output to PD device (default setting)

\* When Connect PoE Switch Data or PoE port , The DIP Switch need off.

### Join Button

- Press the Join button for 1-3 seconds on both Local and Remote Extenders to Link them.
- Press the Join button on the Remote Extender for 5-8 seconds to disconnect the Link between the Extenders
- Press the Join button for 10~15 seconds to reset the Extender to default.

All specifications are subject to change without notice.  
Copyright © 2025 AETEK INC. All rights reserved.