

### INTRODUCTION


The H62-084-MX-250P is a 8 port 10/100/1000BaseT PoE switch capable of feeding 15.4/30//60/90W (54V max. per port) power to Power over Ethernet (PoE) devices. It comes with another 4xGbE SFP port. The switch is capable of a total of 240 Watts PoE power budget.

### PACKAGE CONTENTS

* 1x PoE switch	* 1x Quick Installation Guide	* 1x Console cable
* 1x T25 L-wrench, 4x wall anchors	* 1x Corrugated Tubing , 1x M25 screw plug.	

### ⚠ IMPORTANT:

1. Install the PoE switch in a ventilated and dry place that is free of electromagnetic source, vibration, moisture, and dust.
2. Make sure the ventilation openings on the switch are not blocked.
3. Use CAT5 or 5e UTP/STP cables.
4. AC input (100~240V/AC, 50~60Hz), for a max. consumption of 250W.
5. Digital output (relay): ON/OFF, support support max. 24V DC/1A. Digital input: level 0(open), level 1(Close to GND).
6. Ports 7 and 8 are 802.3at mode by default. These ports support passive PoE and 802.3at mode.

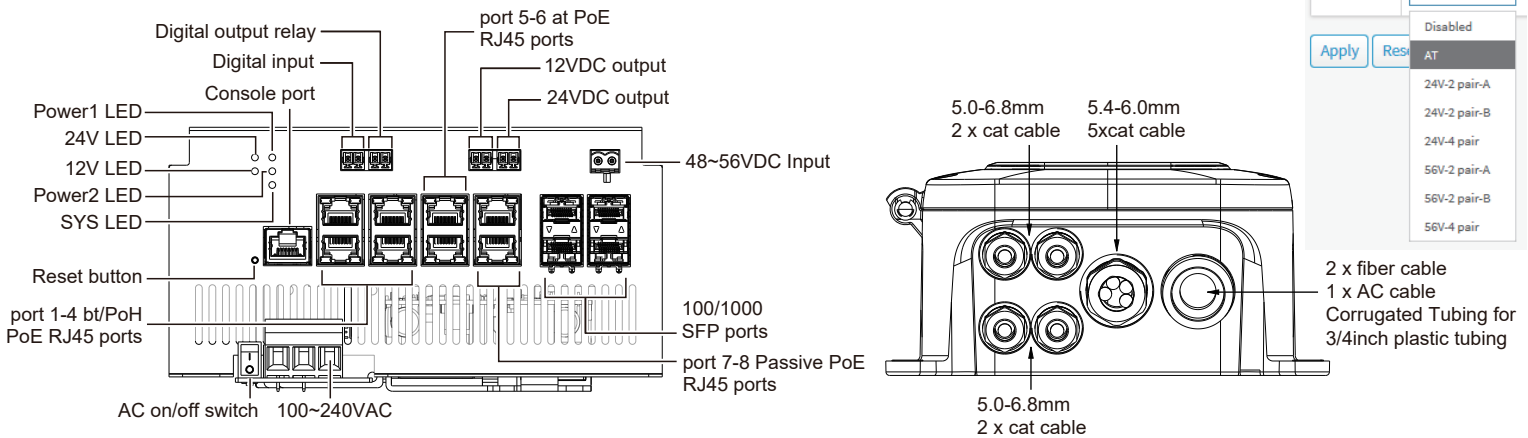

### Reset button

Task	Method	SYS LED Behavior	Port Status LED Behavior
Reset	Press 2 ~ 7 seconds	Blinking Green	All LEDs Off.
Restore Defaults	Press 7 ~ 12 seconds	Blinking Green	All LEDs On.

### DO LED

LED	Color	State	Description
System	Yellow	On	DO ON
		Off	DO OFF

### Power LEDs

LED	Color	State	Description
Power1	Green	On	Powered on correctly.
		Off	Not receiving power from power1.
Power2	Green	On	Powered on correctly.
		Off	Not receiving power from power2.


### DEFAULTS

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
User Name	admin
Password	admin

### Console Port Defaults

Baud rate	115200
Stop bits	1
Data bits	8
Parity	N
Flow control	none


The cabinet must be grounded using a ground wire between the ground screw and earth ground.

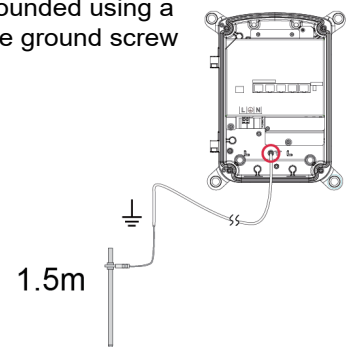



### Port Status LEDs

LED	Color	State	Description
RJ45 Ports (PoE)	Amber	On	The port is enabled and supplying power to connected device.
	-	Off	The port has no active connection, or it is not connected to a PoE PD device. Otherwise, the port may have been disabled through the switch user interface.
RJ45 Ports (LAN)	Green	On	The port is enabled and established a link to connected device.
	Green	Blinking	The port is transmitting/receiving packets.
	-	Off	The port has no active network connection, or it has no established link to connected device. Otherwise, the port may have been disabled through the switch user interface.
SFP Ports	Green	On	The port is enabled and established a link to connected device,
	Green	Blinking	The port is transmitting/receiving packets.
	-	Off	The port has no active network connection, or it has no established link to connected device. Otherwise, the port may have been disabled through the switch user interface.

## DI/DO Connection Diagram

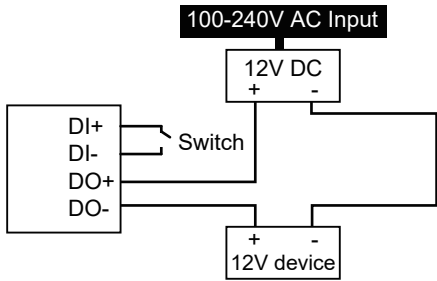


## DI/DO Connection Diagram w/ AC or DC Relay

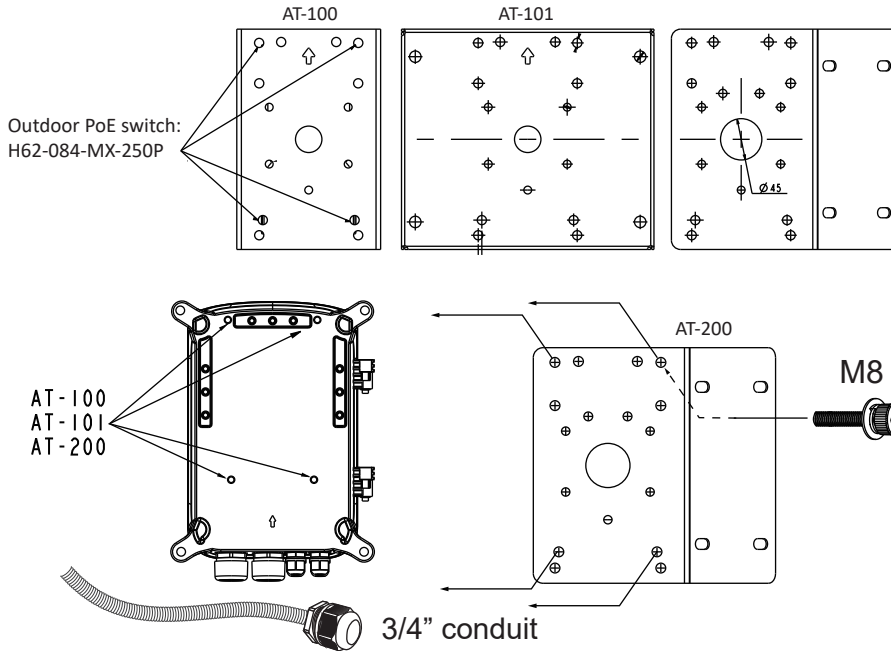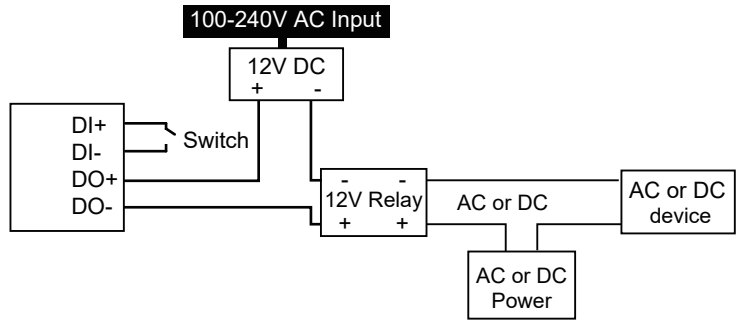


### AC Power Cable Spec.

Wire Size	10~18AWG
Wire Strip Length	8mm

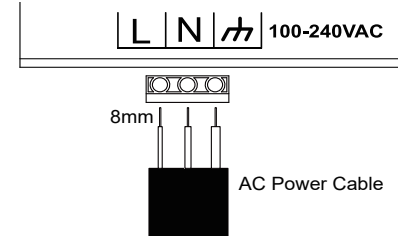


### DC Power Cable Spec.

Wire Size	10~18AWG
Wire Strip Length	8mm

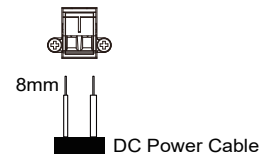

## Assemble Cable Glands

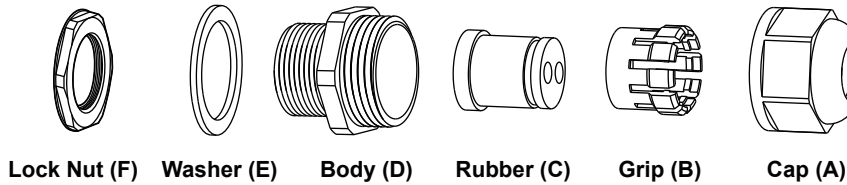

- Thread the Cat5e/6 cable through the cap(A) & grip(B)
- Split rubber(C), rubber have one sizes for meet 5.4~6mm Cat5e/6 cable.
- Fit the split rubber(C) over the Cat5e/6 cable
- Thread the Cat5e/6 cable through the body(D)
- Assemble the washer to the body.
- Mount the nut to the assemblage.
- Tighten the cap and the body together as the illustration shows.
- Tighten the whole assemblage to the full. See the illustration.