



I63-216 Industrial 2-port Gigabit PoE Injector

Quick Installation Guide

PACKAGE CONTENTS

* 1x PoE injector	* 1x Quick Installation Guide
-------------------	-------------------------------

CONNECTION

Installation Steps:

1. Connect the power cable to the injector. The Power LED (Green) should be lit.
2. Connect the Data IN port to a LAN switch using an Ethernet cable.
3. Connect the Power+Data OUT port to a powered device, i.e., IP camera, using another Ethernet cable. Make sure the PoE LED is lit.
4. Check if the powered device (IP camera) is working properly. An IP camera may take up to 1 or 2 minutes to power up.

LED definitions

Power	Green ON: power good; OFF: power failed.
PoE	Amber ON: PD detected

Application

