



IMPORTANT:


The mounting hole definition is illustrated below. The same mounting hole pattern apply to all pole-mount and corner-mount brackets.

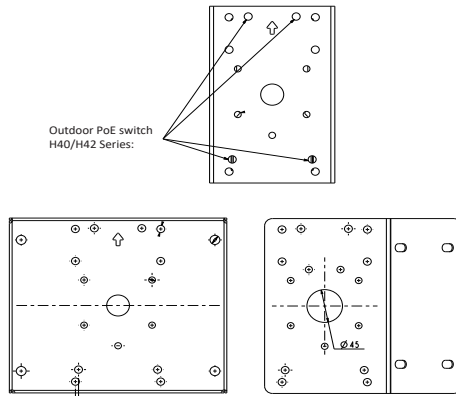

The cabinet must be grounded using a ground wire between the ground screw and earth ground.

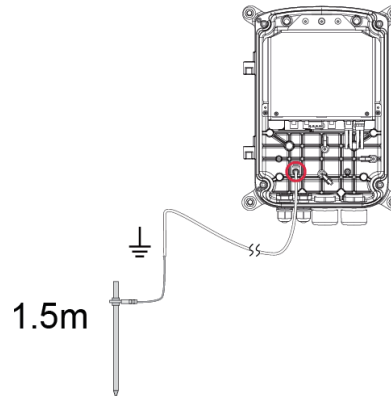

ASSEMBLE CABLE GLANDS

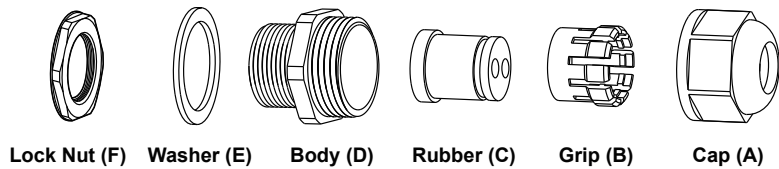

1. Thread the Cat5e/6 cable through the cap(A) & grip(B)
2. Split rubber(C), rubber have one sizes for meet 5.4~6mm Cat5e/6 cable.
3. Fit the split rubber(C) over the Cat5e/6 cable
4. Thread the Cat5e/6 cable through the body(D)
5. Assemble the washer to the body.
6. Mount the nut to the assemblage.
7. Tighten the cap and the body together as the illustration shows.
8. Tighten the whole assemblage to the full. See the illustration.